How to expand the luggage?
如何展開行李箱?

STEP 1

STEP 2

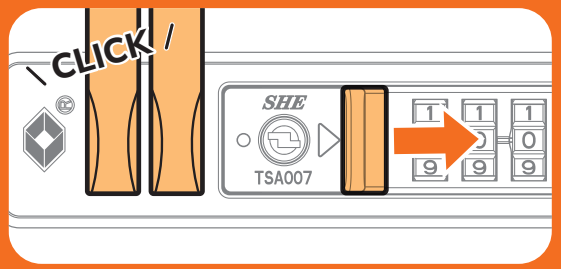

STEP 3

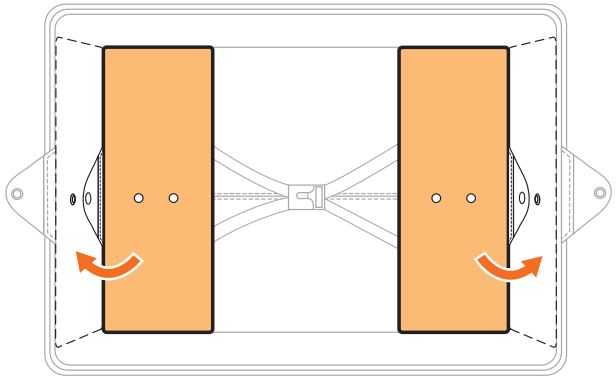

STEP 4

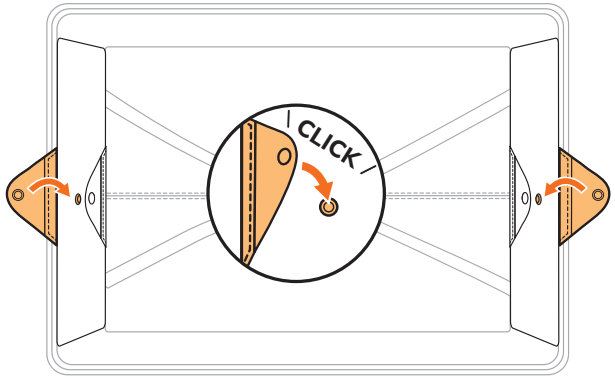

Password Lock User Instructions
如何更改密碼鎖的密碼？

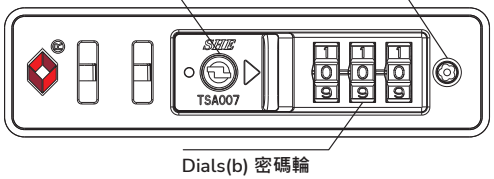

The original combination is set to 0-0-0. To set your personal combination, follow these steps:

1. Align the dials to the original combination (0-0-0).
2. Press down the reset button (a) with a tool until you hear a “click” sound.
3. Set your desired combination by turning the dials (b) (e.g., 8-8-8).
4. Push the button (c) in the direction of the arrow. The reset button (a) will return to its original position when you hear a “click” sound.
   Now, you have successfully set your personal combination. Please remember it carefully.
   To reset the combination, repeat the steps above.

該款鎖初始密碼為0-0-0，用戶如要重新設定個人密碼，請按照以下步驟：

1. 將密碼輪調到初始密碼 0-0-0。
2. 用筆或其他工具按下條碼開關(a)，直到聽到“咔嗒”聲為止。
3. 通過轉動密碼輪(b) 設定個人密碼，例如 8-8-8。
4. 朝箭頭方向按下推鈕(c)，當再次聽到 “咔嗒” 聲時，條碼開關(a)回位。至此，您已完成個人密碼設定。請牢記密碼，如需重新設置，請重覆上述步驟即可。

WARNING: If the cylinder is opened, please lock it again by turning it in the direction of the arrow until it reaches the red dot position. *(Use any tool that fits into the cylinder.)*

注意：如鎖芯處於開啟狀態，請把鎖芯依照箭頭方向旋轉與紅點位置對齊，以便重新鎖上。(任意能插入鎖芯的工具都可以操作)